




Sanyo VPC-X1200 Button Plate Replacement

Written By: Anthony Giardina

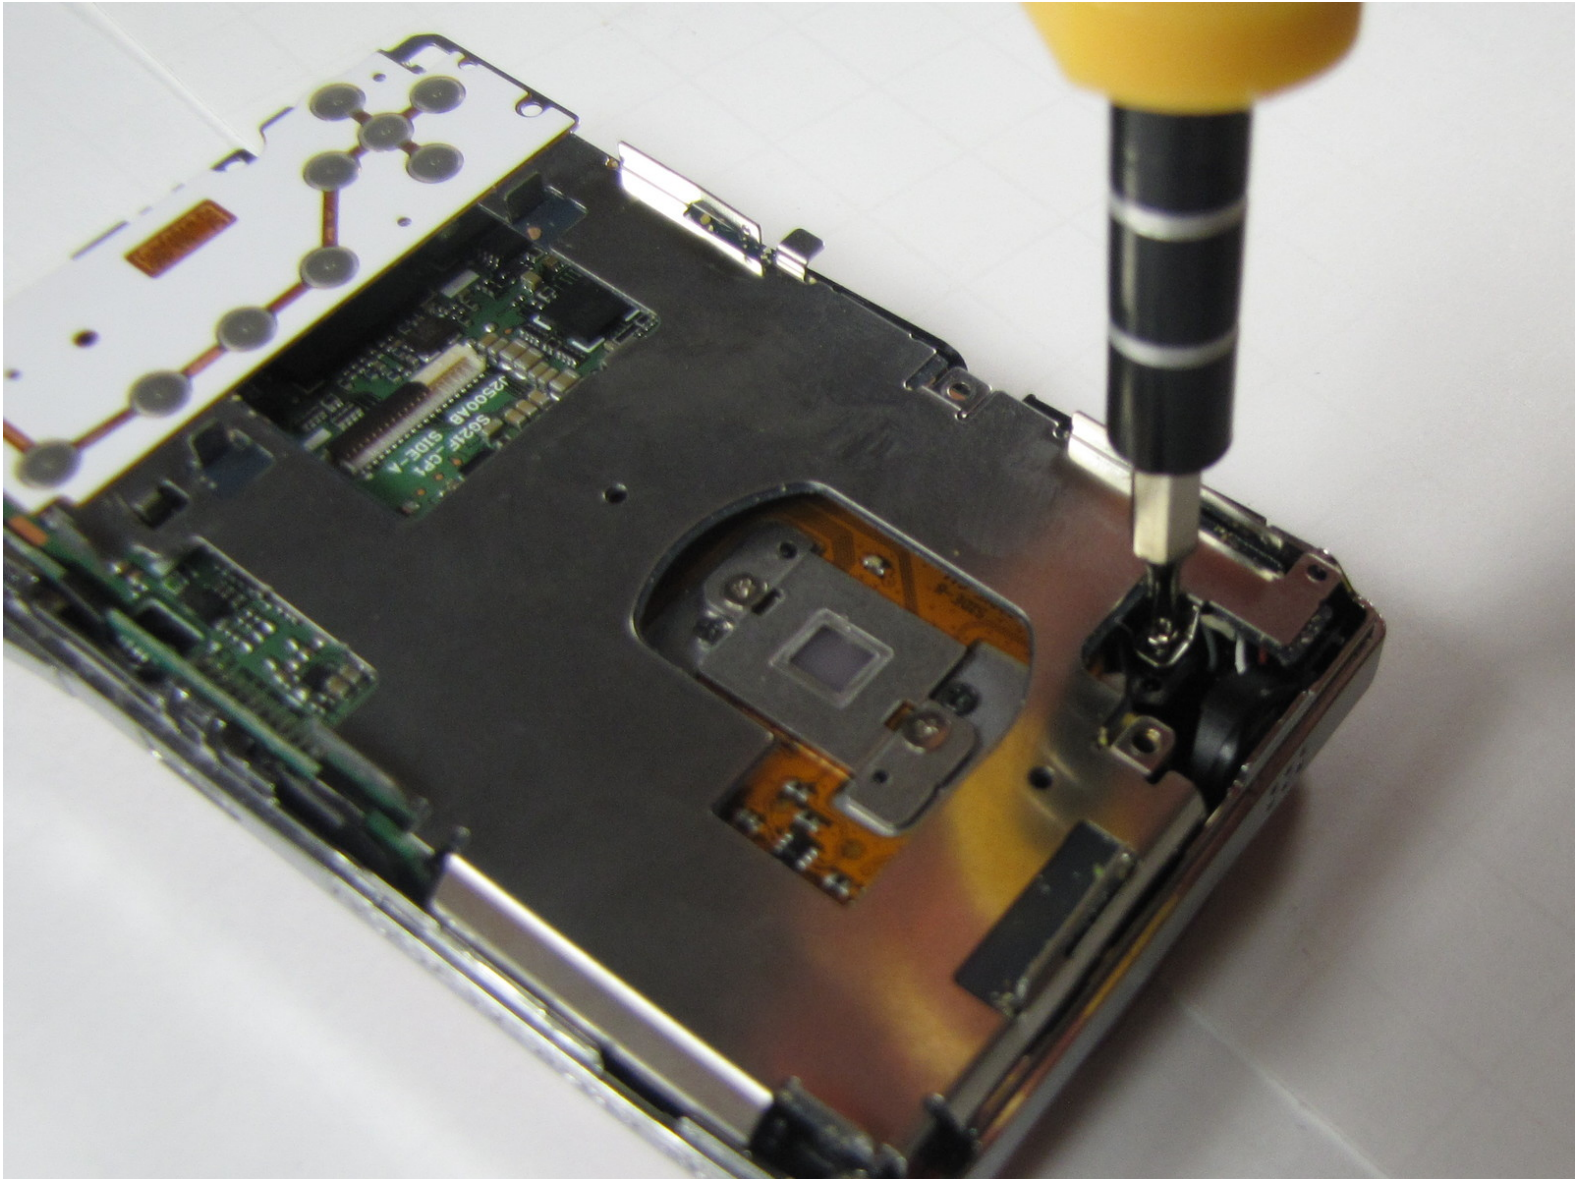

INTRODUCTION

This guide will help you remove the button plate from the camera



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Case





- Remove the five case screws with a Phillips #00 Screwdriver.
- Five 3.5mm Phillips Screws

Step 2

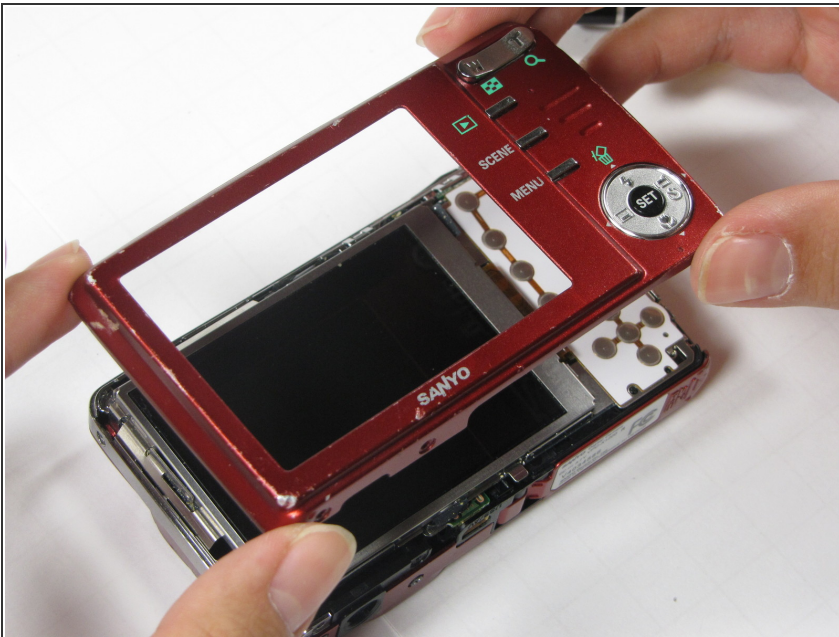

- Gently lift up the back cover and set aside.



Step 3 — LCD Screen

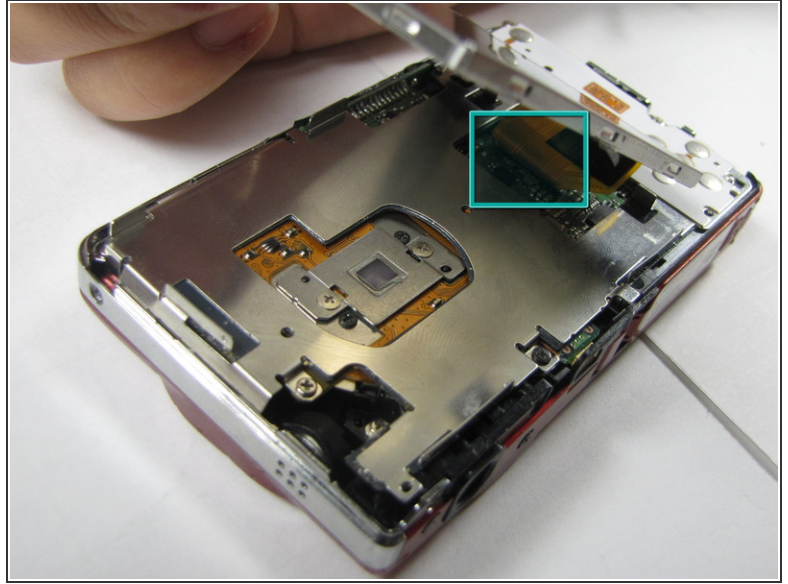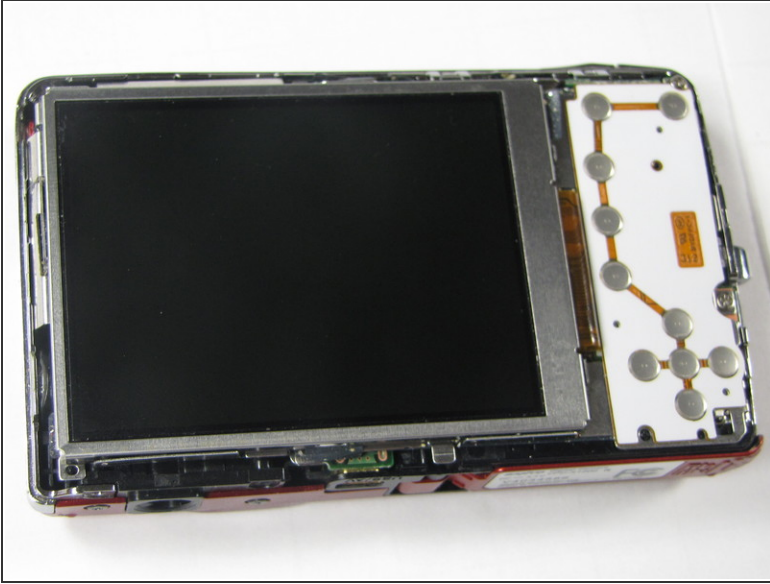

- Gently lift up on the left side of the LCD and slowly pull it to the left side of the camera but do not remove entirely, there is a ribbon connector.



⚠ Be careful not to rip out the ribbon connector.

Step 4

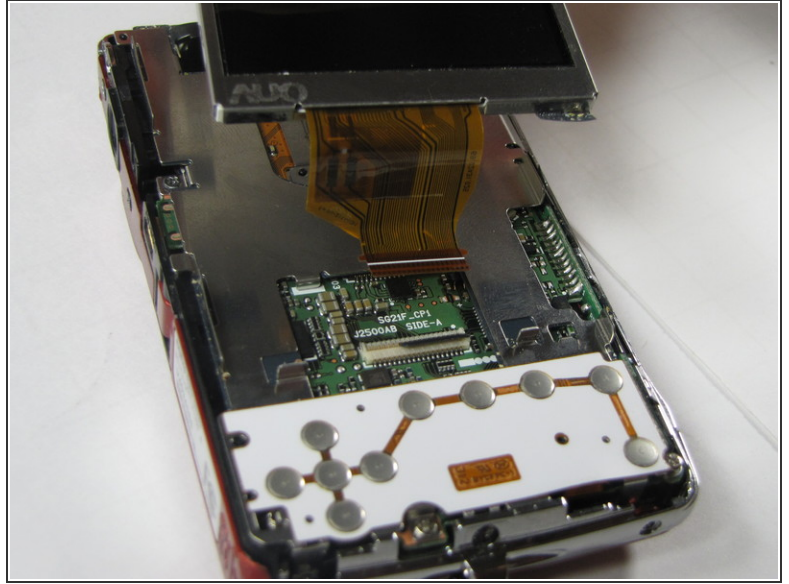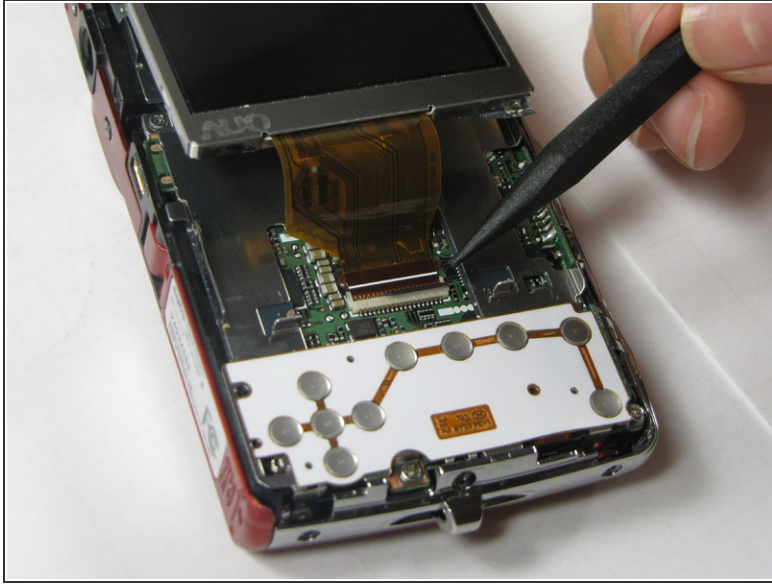



- To clear the ribbon connection underneath the screen, lift up the black ribbon gate with the spudger.
- Gently lift ribbon out of the gate and set screen aside.

Step 5 — Button Plate

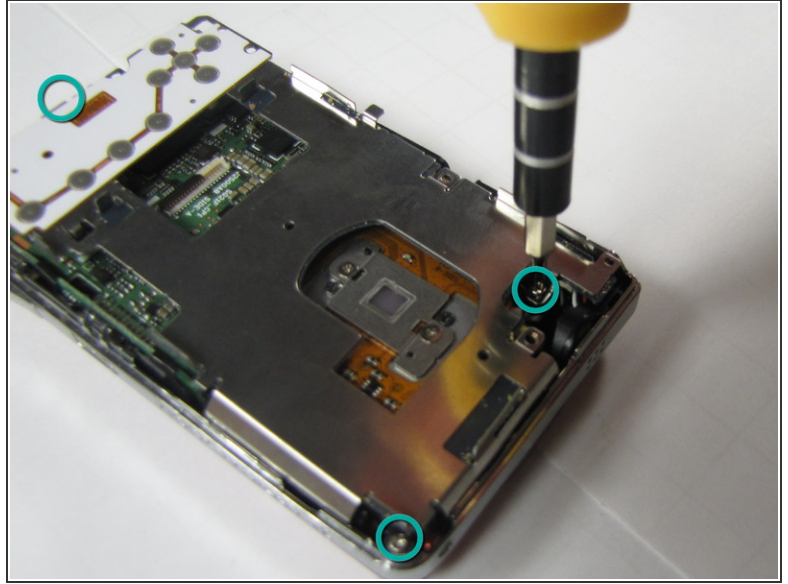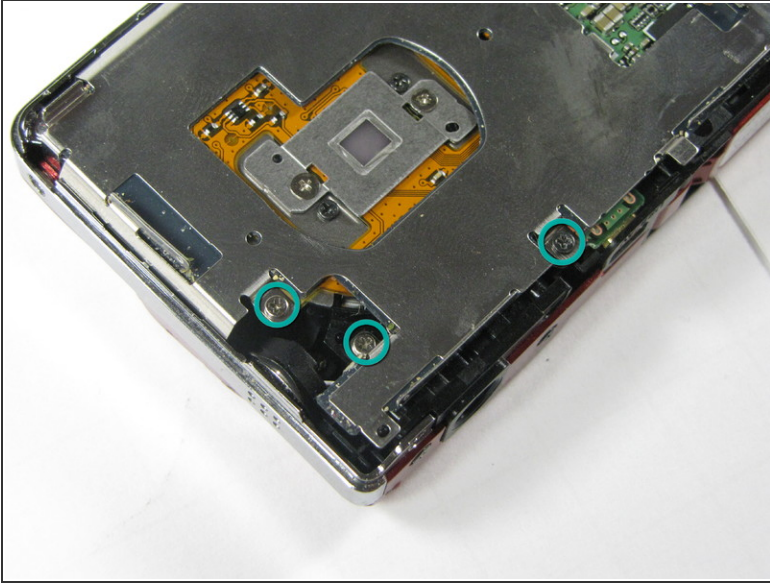

- There are five screws of three different sizes which need removal.
- One 4.5mm screw
- Four 3.5mm screws, one on the button side
- One 5.5mm screws

Step 6

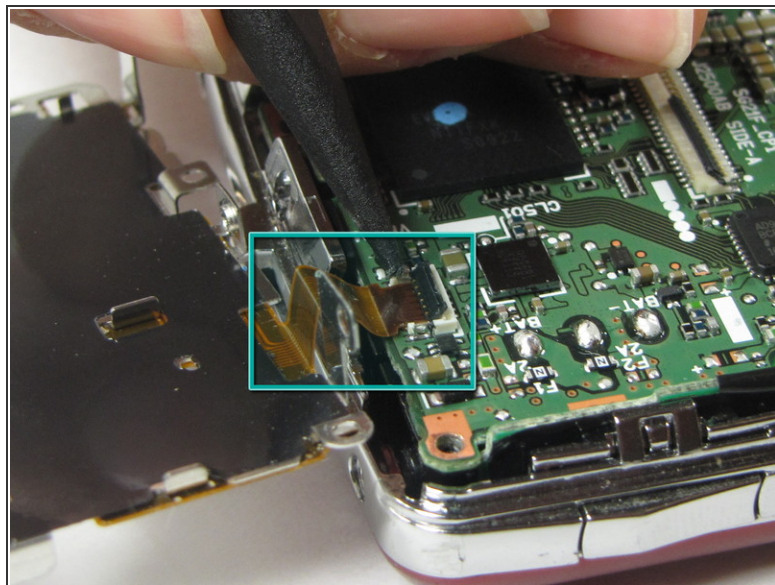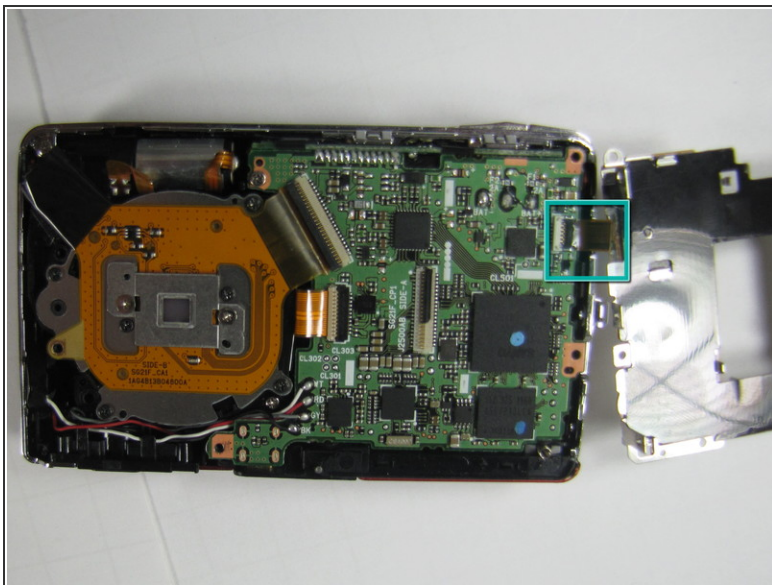

- Slowly lift metal tray to the right.
- ⚠ Be careful not to bend the screw tabs or rip out the ribbon cable.
- Remove ribbon cable by using the spudger to lift up the black ribbon gate to release the ribbon

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 05:39:58 AM.